Please read this manual carefull before you use the product and keep this manual properly for your further consultation

USER'S MANUAL

Catalog

Pages

- international wash symbol. . . . 1
- Notice items. . . . 2
- Disposal of the old machine. . . . 2
- Important information. . . . 3
- Introduction of the control panel. . . . 4
- Common washing steps. . . . 5
- Selection of the washing process. . . . 5
- Useful washing process. . . . 6
- Introduction of the washing proces. . . . 7
- Special function. . . . 8
- Maintenance of the washing machine. . . . 9
- Abnormal situations and disposal methods. . . . 10
- Abnormal display of the washing machine and disposal method. . . . 11
- The spec and the technical parameter of the washing machine. . . . 11

International wash symbols

The symbol on the fabric label can help you choosing the best way to take care of the clothes.

Power wash Gentle wash	 The highest wash temperature is 40°C	Hand wash No bath	Bleach No bleach	Cold water bleach No dryer	High temperature Low temperature Dryer

Iron No iron	Maximum 110°C iron Maximum 150°C iron	Dry clean No dry clean	Dry clean with all kinds of solvent Dry clean: with gas, pure alcohol, or R113	Dryer Dry flat	Dry on the rope Dry on the clothes rack

Notice items

To prevent any damage to your and other's life or property，
you must follow the following items：

Electric shock danger

- Please do not replace the power supply wire privately.
- Please do not pull out the power plug by draw the power supply wire forcibly.
- Please do not plug/draw the power plug with wet hands.
- Please do not damage the power cord and the power plug.
- To prevent any accidental electric shock , please make sure that the power plug of the washing machine is earthed well.

Injured danger

- Please do not dismantle and install the washing machine privately.
- Please do not climb or sit on the top cover of the washing machine.
- Please do not lean on the opened door of the washing machine.
- Please do not open the door forcefully when the washing machine is working.
- Please do not put any heater on the washing machine, for example candle，mosquito coil，electric cooker, and etc.
- It is forbidden for the children to play in the basket of the washing machine. Pay attention to prevent children's hands get locking in the washing machine's door slot.

Damaged danger

- Please do not wash over the rated wash capacity.
- Please do not expose the washing machine to the sunlight directly.
- Please do not install the washing machine at the humid and drenching environment.
- Please pull out the power plug when cleaning or maintenance. And do not wash the washing machine with water directly.

Poisoned danger

- Please put the detergent and softener far away to the children.

Explosive danger

- Please do not wash the clothes with any flammable substances, for example coal oil，gas，alcohol, and etc. Or maybe cause explosion.

Disposal of the old machine

When you want to give up the washing machine because it cannot be used and has no value to repair, pull out the power plug and nip the power supply wire; attaint the door hook beside the observational window to prevent any choke because of being locked when children have a game. This machine is made of recycled material. Have a correct disposal and recycle please. It will contribute for the environmental Protection.

Important information

Purpose

- Connect with cold tap water only.
- Your machine is designed for household use only.
- The washing machine is suitable for washing-the fabric that can be washed in water solvent with detergent.
- Please select the detergent and front loading.

First wash

- Before the first wash, you need to finish a “self-clean”cycle without the clothing. Please follow the steps below:

1 Plug the power. 2 Open the water supply tap of the washing machine. 3 Turn the cycle selection knob to “self-clean”.

4 Add proper amount of detergent according to the requirement，and press【start/pause】button.

Notice：some fabric will fade when it is washed，please do not wash the faded fabric with other clothing.

- Please wash the white fabric and the colored fabric separately; otherwise, the white fabric will turn gray.

The usage of the detergent

- The main wash detergent and pre-wash detergent that are commended for this front loading washing machine is: low bubble detergent that is suitable for the front loading washing machine. It is forbidden to use high bubble detergent that is unsuitable for the front loading washing machine. To prevent any damage to the washing machine.
- The dosage of the detergent lies on: 1. wash amount 2.the dirty degree of the clothing 3. The rigidity of the water 4. The wash ability of the detergent
- Please check the instruction of the detergent before the wash. You will get a better effect by using the detergent properly.

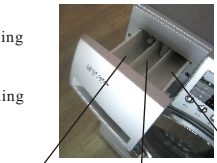

- Pre-wash detergent-if there is any clothing that needs the pre-wash; please add the pre-wash detergent in the pre-wash grid for the better effects during the following wash procedure. (At this time, the liquid detergent shall not be used in the main wash detergent grid. or cannot reach the deserved effects.)
- Rinse additive-the rinse additive is the softeners mainly.Dilute the softener by water before use please if it is dense comparatively.
- Bleacher - if the bleacher is needed, it shall be used according to the bleacher's instructions in the washing procedure.

The cleaning of the detergent's drawer

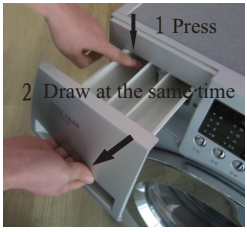

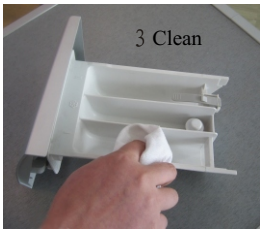

- The detergent will deposit in the box after a long time usage. So, the detergent box needs to be washed frequently.
- Press the detergent box limit parts and pull out the drawer from the detergent box. Clean the detergent box.

Digital tube display

- The corresponding indicator light（PRE-，WASH，RINSE，SPIN）will glitter during the washing process.
- The DELAY light will turn on to display the delay time after the operation of the【DELAY】procedure. It will start the cycle after【xx】hours.
- The REMAIN light will turn on when the wash procedure has begun. The time displayed shows the remain time.
- CHILD LOCKED will turn on when the child locked function is selected.
- DOOR LOCKED will turn on when the door is at the lock state. The door can be opened after DOOR LOCKED turns off only.

Super function

You can select the two functions of extra rinse or pre-wash to get a better care to your clothes .

Start/pause

Start/Pause key, it has the functions of start and pause. The machine will switches between start-pause if press this key continuously.

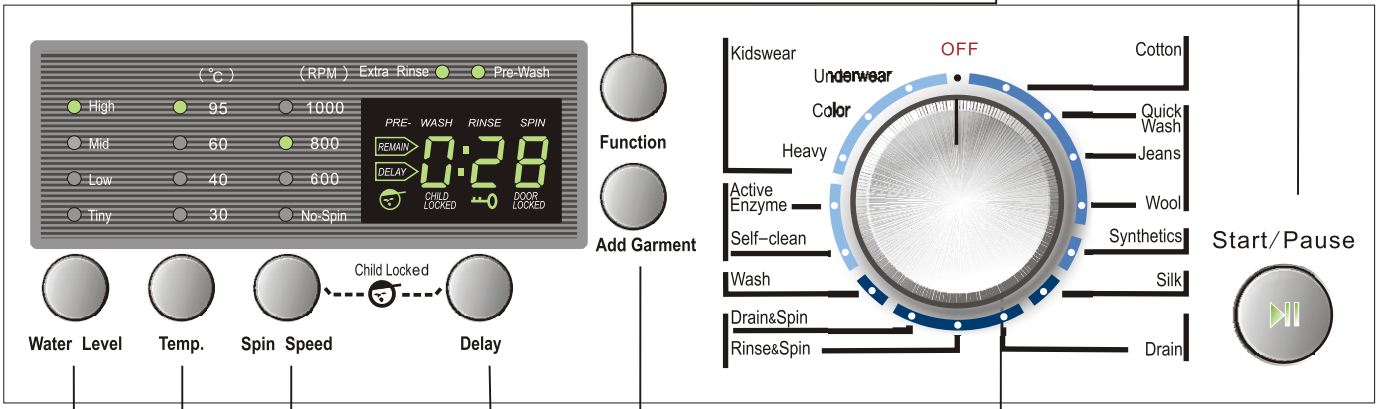

Water level selection

You can adjust the water amount fot wash and rinse according to the clothes amount.

Water temperature Selection

It is used to adjust the water temperature duing the main wash. You can select different water temperature or no heating by pressing this key continuously. It means there is no heating in main wash procedure when no indicator light is on.

Spin speed selection

It is used to adjust the last spin speed of the washing machine. You can get switch on the correspon-ding spin speed if press this key continuously.

Delay

It is used to delay wash. You can get 0-24 hour to press this key continuously. The delay time means the wash starts after [xx] hours.

Add garment

It is used for adding garment during the wash procedure. The wash machine will suspend the wash procedure and unlocked the lock automatically if this key is pressed. Press The【start/pause】key to continue the wash after you have added garment and closed the door.

Cycle

Different wash cycle are selected according to the user's needs to make the clothes have a cleaner and more efficient wash.

General wash steps

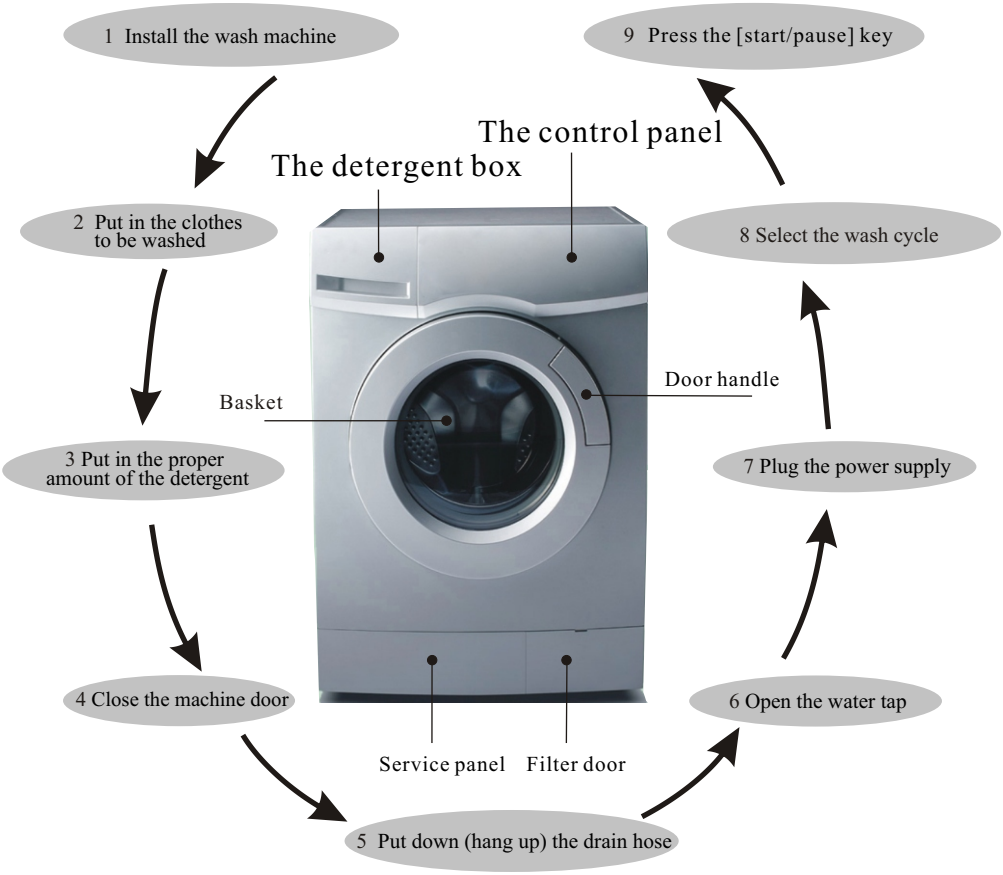
1 Install the wash machine
2 Put in the clothes to be washed
3 Put in the proper amount of the detergent
4 Close the machine door
5 Put down (hang up) the drain hose
6 Open the water tap
7 Plug the power supply
8 Select the wash cycle
9 Press the [start/pause] key
The control panel
The detergent box
Basket
Door handle
Service panel
Filter door

Selection of the wash cycle

1 Turn the cycle selection knob to select the needed cycle.

2 Select the proper water level, temperature, spin speed or other attached functions.

3 Press the 【start/pause】 key.

End of cycle

- There will be the music prompts from the wash machine at the end of the cycle.
- Close the water tap.
- Set the cycle selection knob at the “OFF”(“stop”) position, and pull out the power plug.

Useful washing process

Instruction to the delay washing process

- The digital tube will display delay time only when the delay procedure starts. The indicator delay light will flash. The indicator light will turn off when the delay time reaches and the indicator remain light will turn on to display the remain time.
- The【DELAY】time displayed by this machine, indicates that the washing machine will started after【xx】hours.

Steps in detail

1 Turn the cycle selection knob to select the needed cycle; 2 Select the proper water level, temperature, spin speed or other attached functions according to your need; 3 Press the【delay】key; 4 Select the delay time;

5 The washing machine will at the standby condition. after push the【start/pause】key, The cycle will run automatically when the delay time is over.

Instruction to single wash procedure

- You can choose from【wash】,【drain & spin】,【rinse & spin】to【drain】according to need.
- To choose【rinse & spin】procedure and set the spin speed to "No-Spin" to get a rinse only function.

Instruction of Child locked function

- The machine has child locked function. It can prevent children's press or careless mistake efficiently.
- You can turn on "Child locked function" by press the【Spin speed 】and【Delay】keys at the same time and hold them over 3 seconds when the washing machine is at running state.
- You can turn off "Child locked function" by press the【Spin speed】and【Delay】keys at the same time and hold them over 3 seconds when the "Child locked function" is used.
- If the "Child locked function" is used, the washing machine will go on the left procedure when you turn on the power after it lost the power . The "Child locked function" should be canceled if you want to change the cycle or run a new cycle after one end.

Manual soak

1 Put the clothes into the washing machine;

2 Add the detergent into the detergent box according to the instructions from the detergent manufacturer.

3 Turn the cycle selection knob to the needed cycle and press the "start/pause" key. The washing machine will start to work;

4 The washing machine suspends the work to have the clothes soaked in the water.

Press the【start/pause】key to restart the machine to continue the previous wash after your needed soak time.

Introduction of the cycle

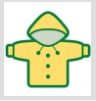

Content / Cycle	Maximum temperature (Centigrade)	Maximum spin speed (RPM)	The maximum washing capacity (kilogram)	Extra Rinse	Pre-Wash	detergent box			Default running time	Clothes to be washed (Suggestion)
						I Pre-wash	II Main wash	Softener		
Cotton	95	1000	7	Optional	Optional	○	●	○	1:37	Ordinary clothes
Quick wash	40	1000	3.5	Optional	Non-optional	×	●	○	0:28	Not so dirty clothes
Jeans	95	1000	7	Optional	Optional	○	●	○	2:47	Comparatively thick clothes
Wool	40	800	2.5	Optional	Non-optional	×	●	○	0:58	Wool clothes
Synthetics	60	800	3.5	Optional	Optional	○	●	○	1:11	Synthetics clothes
Silk	30	600	2	Optional	Non-optional	×	●	○	0:42	Silk clothes
Kidswear Under-Wear	95	1000	7	Optional	Optional	○	●	○	1:52	Kid's underwear
Kidswear Color	40	1000	3.5	Optional	Optional	○	●	○	1:07	Kid's ordinary clothes
Kidswear Heavy	60	1000	3.5	Optional	Selected	○	●	○	1:38	Kid's comparatively dirty clothes
Active enzyme	60 (Default)	1000	3.5	Optional	Must	●	●	○	2:16	Comparatively dirty clothes
Self-clean	95 (Default)	600	/	Non-optional	Non-optional	×	●	○	1:12	No clothes
Wash	95	/	7	Non-optional	Optional	○	●	×	0:32	The clothes that need wash only
Rinse + Spin	/	1000	/	Optional	Non-optional	×	×	○	0:21	The clothes that need rinse only
Drain and Spin	/	1000	/	Non-optional	Non-optional	×	×	×	0:12	The clothes that need spin only
Drain	/	/	/	Non-optional	Non-optional	×	×	×	0:01	The clothes that need drain only

○ It means that need to add the wash powder or the softener ● It means that must to add the wash powder, or the wash effect can not reach × It means that the wash powder or the softener cannot be added

⚠ The running time of the washing machine will change according to the variance of the water temperature, water level, clothes, water inlet pressure and the drain state.

Special function

Self clean

The self-clean cycle is specially set in this machine to clean the basket and the tub. It adopts 95℃ high temperature sterilization to make the clothes washing healthier. You cannot wash clothes or other garment when you run this cycle. The cleaning effect will be better if you add proper amount of chlorine bleacher. You can use this cycle regularly according to the need.

Active enzyme

Active enzyme cycle, gives full play to the active enzyme of the detergent powder, 40℃ pre-wash, 60℃ main wash (the washing machine only displays the main wash temperature), and it is suitable for the clothes hard to wash.

Extra Rinse

The Extra Rinse is mainly used for the underwear and some clothes with the detergent residue limitation. The washing machine will add a rinse if you select this function. It can rinse the clothes more downright.

Pre-wash

The Pre-wash is a feature function designed to wash the very dirty clothes. This function adds the pre-wash for the clothes. You need to add pre-wash detergent to wash the clothes fully and get a better effect.

Power off memory

You do not need to do any change if the washing machine gets power off at the running state. The washing machine will continue the wash when it get power again.Please do not open the door by force during the power off. Please get help from the professional if you want to open the door.

Add garment

You can execute this operation during the washing procedure.

The state is unsafe and cannot open the door forcefully when the basket of the washing machine is still rolling; there is large amount of high temperature water in the basket.

Use the add garment option by pressing 【Add garment】 key. Please follow the steps below:

1 Wait the basket stops rotation.

2 The door lock unlocked.

3 Press 【start/pause】 key after adding the garment and closing the door.

(The washing machine does not respond the Add Garment function under the high level water or the high temperature water state in rinse phase.)

Maintenance of the washing machine

Note: must pull out the power plug before cleaning and maintenance.

General maintenance

- Please open the machine door, mop up the remaining water of the rubber seal ring, and clean the dirt inside the seal fold in time after every running. It helps to prevent any mildew and rot. Open the machine door slightly to discharge the humidity inside the basket.

Cleaning of the cabinet

- Please do not clean the cabinet by some hard substances like the solvent or steel wool and etc. You can clean the cabinet by the soft cloth.

Emergency drain and the cleaning of the drain pump filter

- If the machine cannot work normally or you want to clean the drain pump filter, please follow the methods below:

1. Set the cycle selection knob of the washing machine to “OFF”(stop) position and shut the tap.
2. Wait until the water cool down if necessary.
3. Put a container on the floor. Put the end of the emergency drain hose into the container. Pull out the stopper and wait until the remaining water flows out naturally.

Open the filter's door

Turn the emergency drain hose stopper

Pull out the emergency drain hose

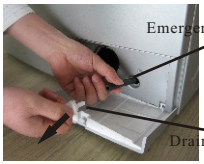

To pull out the stopper

- Please clean the drain pump regularly to prevent the sundries to block the drain pump.

1. Turn off the water tap
2. Pull out the power plug
3. Empty the water with the above “emergency drain” way
4. Screw the pump cover out
5. Clean the filter
6. Install the pump cover back

Cleaning of the water inlet valve

- Please clean the water inlet filter net if find the water inlet time becomes too long.

1. Screw the water inlet hose out
2. Clean with a tool (brush and etc.)

Abnormal situations and disposal methods

The washing machine does not work	● Close the washing machine's door. ● Confirm that have pressed the【start】key.
Water leakage	● Connect the water inlet hose correctly.
The spin of the clothes is abnormal	● Reallocate the big and small pieces of clothes in the basket.
There is the peculiar smell in the washing machine	● Run a Self-clean cycle without any clothes.
No water can be seen in the basket	● No fault-water is under the visible area.
There is remaining water in the softener box	● No fault-the effect of the softener will not be affected.
Remaining detergent is left at the clothes	● The water-fast component of the non-phosphorus detergent will be attached on the clothes to form the slight fleck.
No feed water to the washing machine	● Open the water tap. ● Check the selection of the cycle. ● Check the water pressure, if the water pressure is insufficient. ● Connect the feed water. ● Close the washing machine's door. ● Check the water inlet hose, if it is bent or blocked.
The washing machine feeds and drains water at the same time	● Make sure that the lowest point of the drain hose is higher than the water level of the inside of the washing machine. ● Check the drain hose has not been sealed with sewage. If so, it will cause a no feedback air siphon.
The washing machine does not drain	● Check the drain pump, if it is locked. ● Check the drain hose, if it is bent or blocked. ● Check the height of the drain hose nozzle is 0.6-1 meter high from the bottom of the washing machine.
The washing machine Vibrates	● Level the washing machine. ● Fasten the legs. ● Check all of the transport bolts, if they have been unloaded.
The bubble spills from the detergent box	● Check the used detergent amount, if it is too much, if it is the special detergent for the front loading washing machine. ● Dip one cup of softener mixed with half-liter water to the detergent box II. ● Reduce the used detergent amount next time.
The machine stops without finishes the cycle	● Power cut or cut off water supply.
The drain pump has noise during the operation when the water has just been drained out	● There is still a little water in the drain pump and the drain hose after drain. The drain pump operates continuously. It will take air in and cause noise. It is normal situation.
Stop for a while during the wash procedure	● The washing machine adds water automatically. ● The washing machine is cleaning the bubble because of too much bubble in the tub.

If you cannot solve the abnormal situation, would you please: 1 Turn the cycle knob to “OFF” and pull out the power plug; 2 Close the water tap and contact the nearest service centre.

Abnormal situations and disposal methods

If the washing machine cannot operate normally, and the digital tube displays the abnormal indication or alarm, please have the following examinations and corrections.

Display	Reason	Disposal method
E10	Inlet water overtime	Open the water tap to check, if the water inlet hose is twisted off; if the filter net of the inlet valve is blocked, if the water pressure is too low.
E21	drain overtime	Check the drain hose, if it is blocked (see page 10).
E30	The door has not been closed	Check the door of the washing machine, if it is closed; Check the clothes, if it is pinned by the door.
E50	Voltage is too high	Check the voltage, if it is too high. if it is needed to add a constant voltage device.
EXX	Others	Try again. Please ask help to the local service centre if the same abnormal display appears again.

The spec and the technical parameter of the washing machine

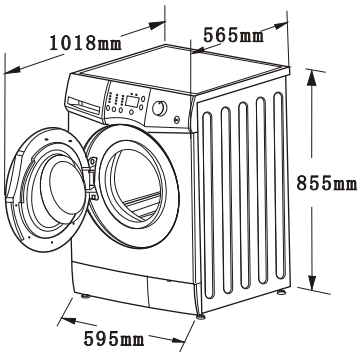

Rated power supply	220V / 50Hz
Wash power	200W
Spin power	460W
Heat power	2000W
Maximum power	2200W
water pressure	0.02MPa~1MPa
Net weight	75Kg
Drain method	Upper drain
Spin method	Centrifugal
Power consumption kilowatt-hour/cycle	1.32
Water consumption liter/cycle	82
Washing capacity kilogram	7.0
Maxinum spin speed rpm	1000